




PHS



**Powder Handling
Station**

SINTERIT SOLUTION ON THE NEXT LEVEL

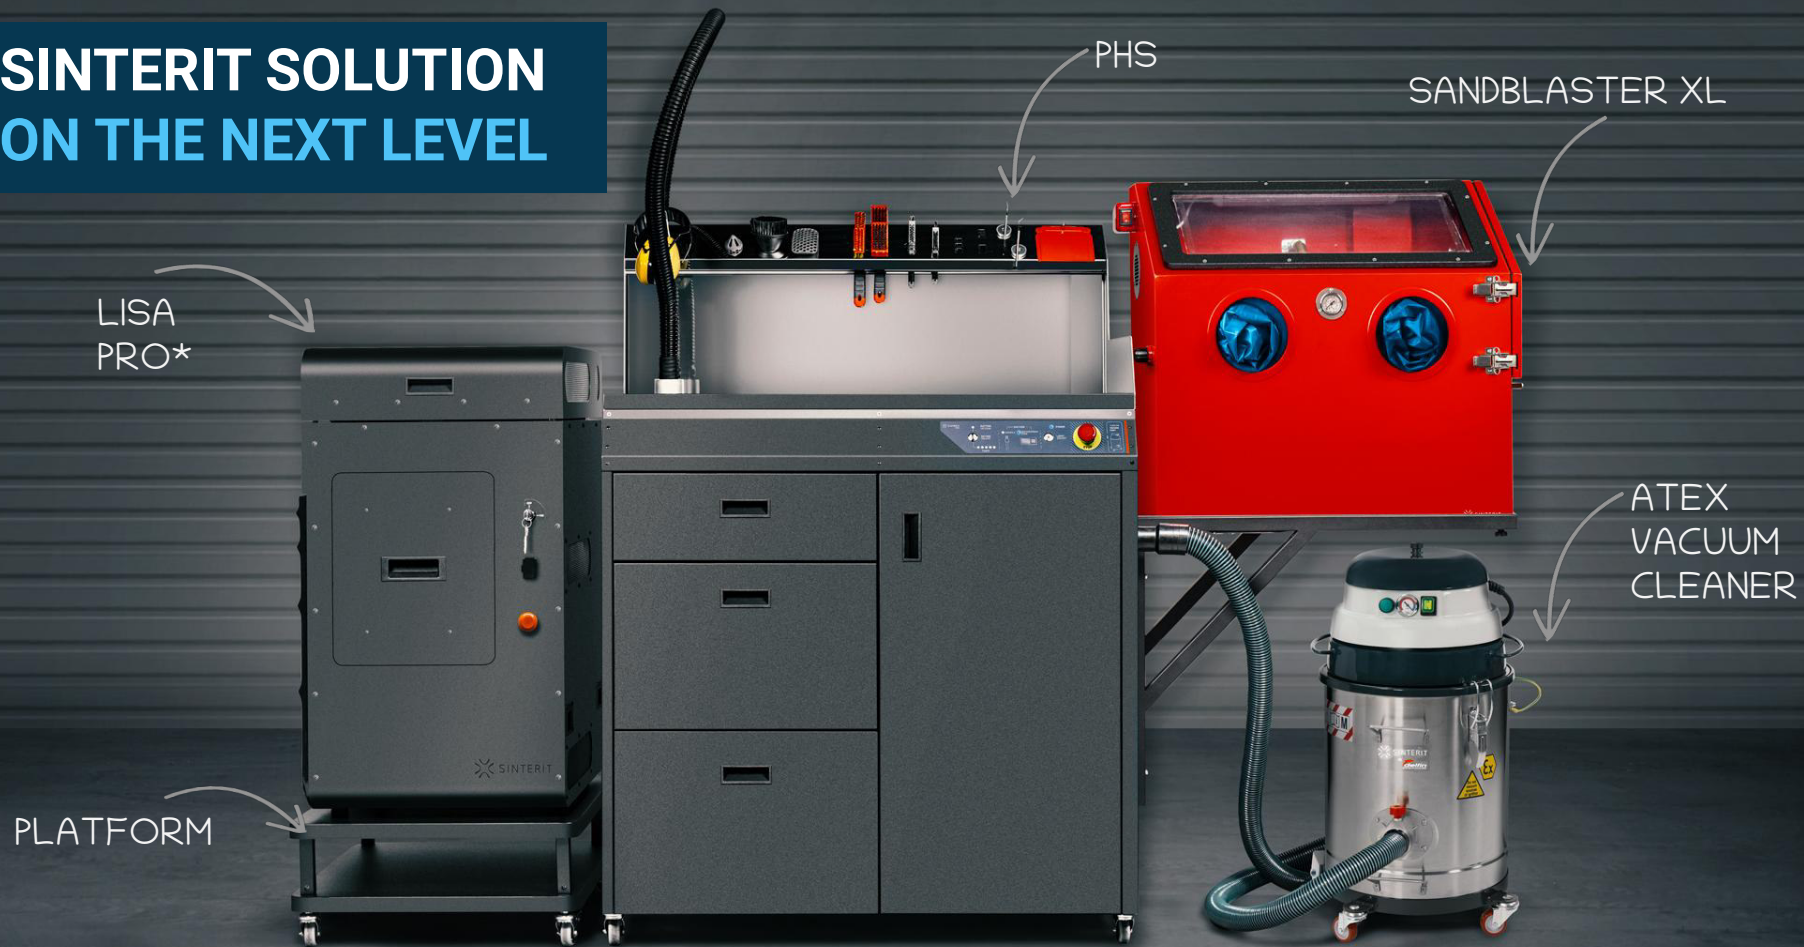

LISA
PRO*

PLATFORM

PHS

SANDBLASTER XL

ATEX
VACUUM
CLEANER

* PHS is compatible also with Lisa

| New quality of powder handling




Supporting device designed to make post-processing and powder recovery as clean as possible:

- **All processes in one place**
- **Clever workspace** - an ergonomic and user friendly solution
- **Tools close to you** - everything you need is always at hand
- **Easy depowdering** in 5 simple steps
- Super hero - **not just for one printer!**
- **PHS in data** - technical details



All processes in one place


Post-processing
and powder
recovery - all
processes
in one!

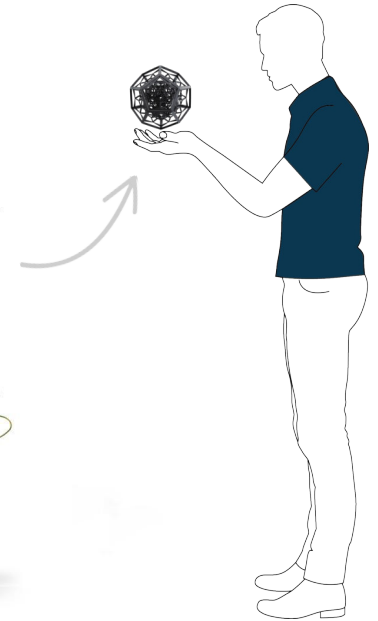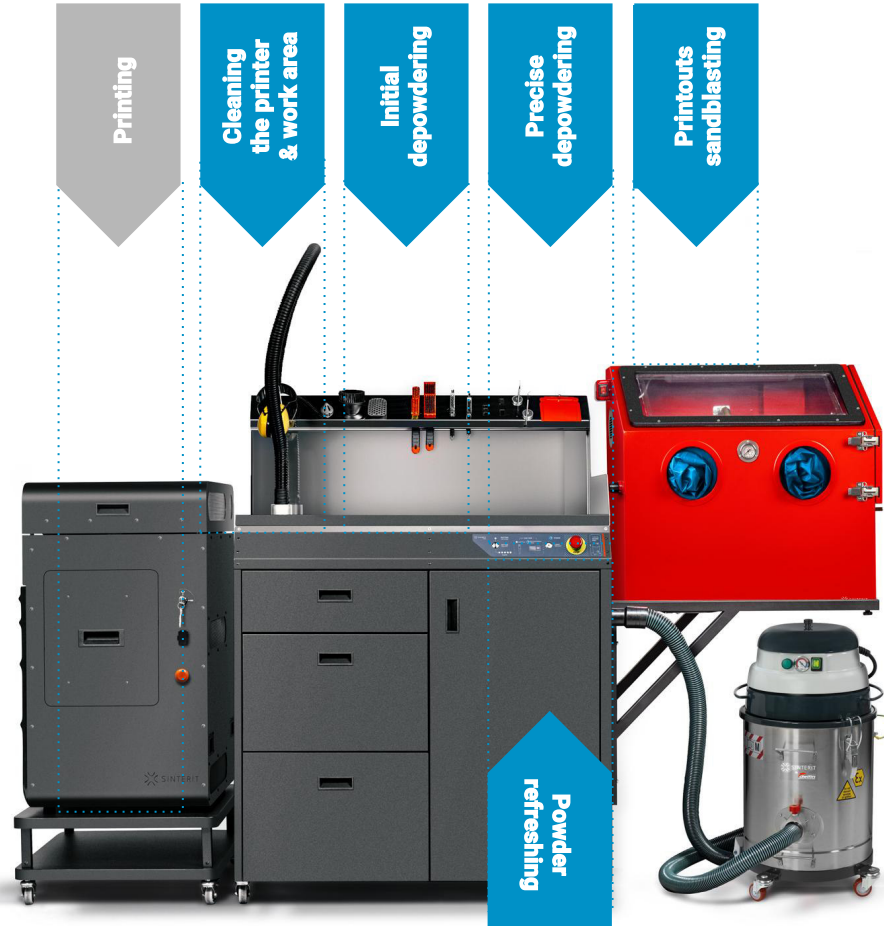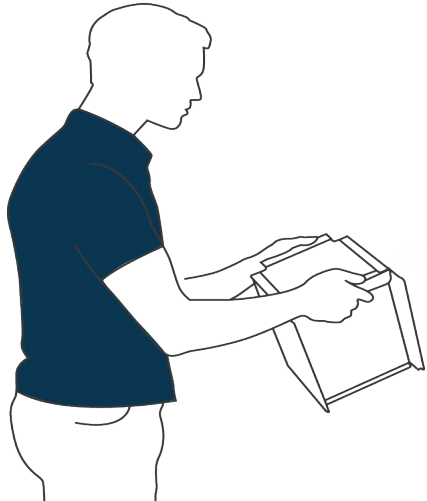




Clever workspace

Designed to be useful

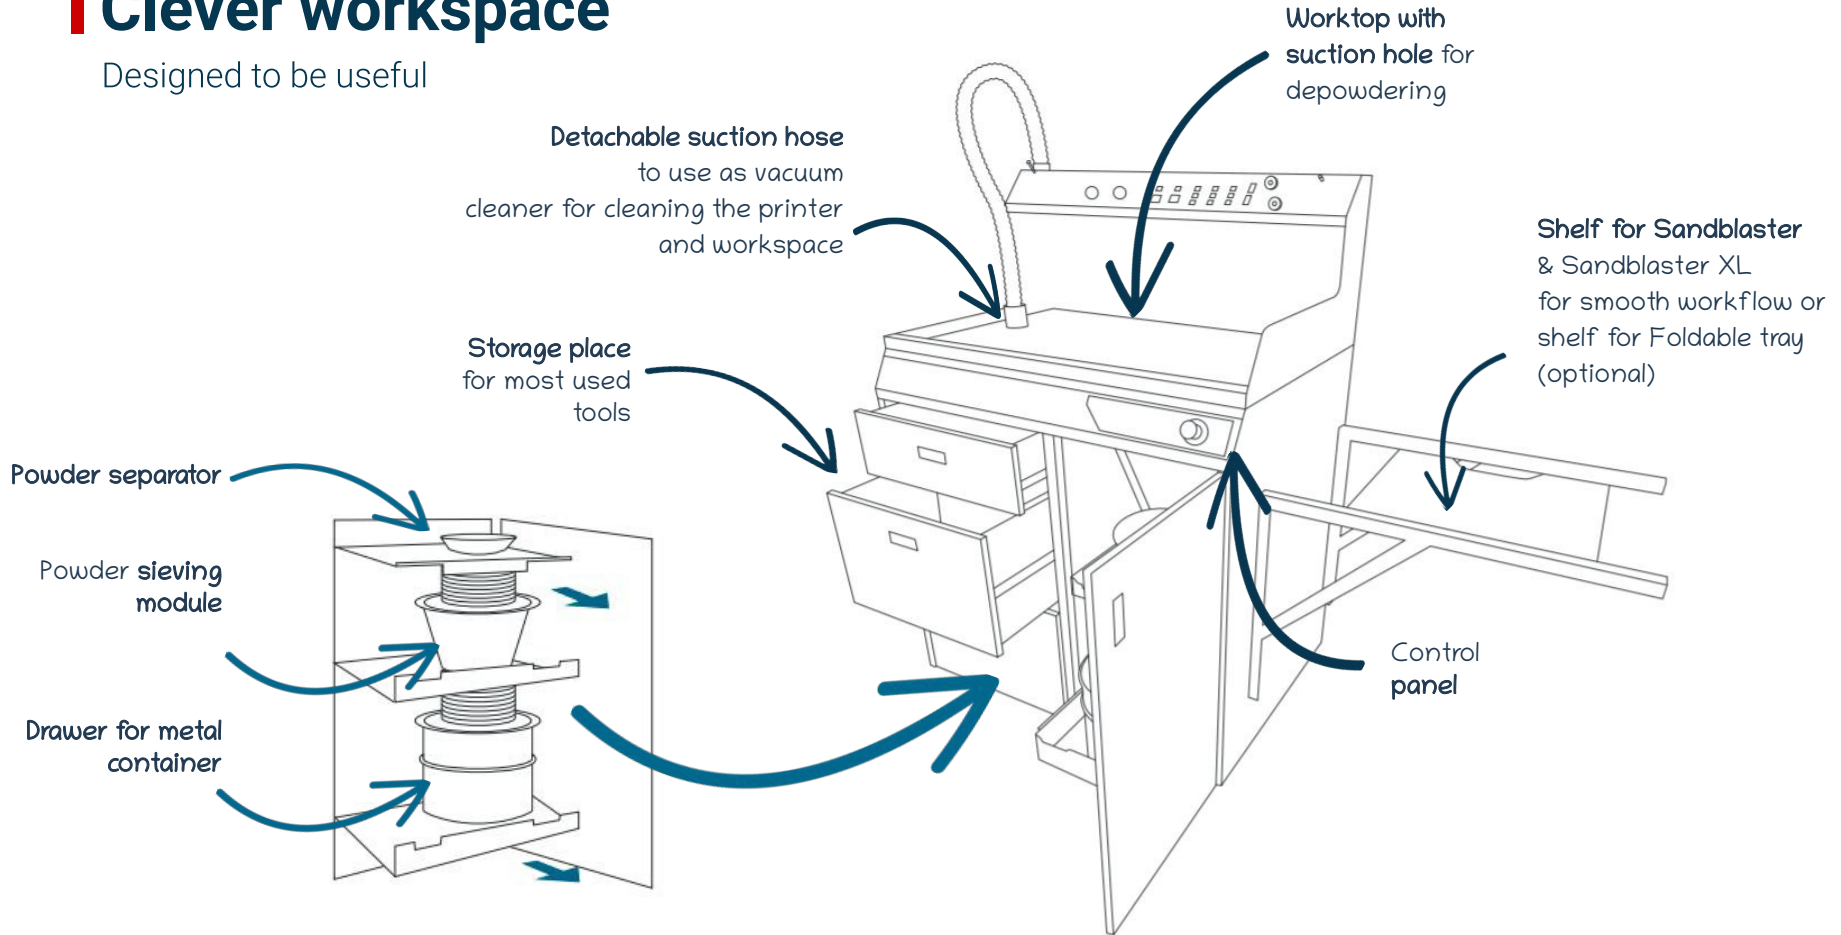


Tools close to you

Everything you need is always at hand

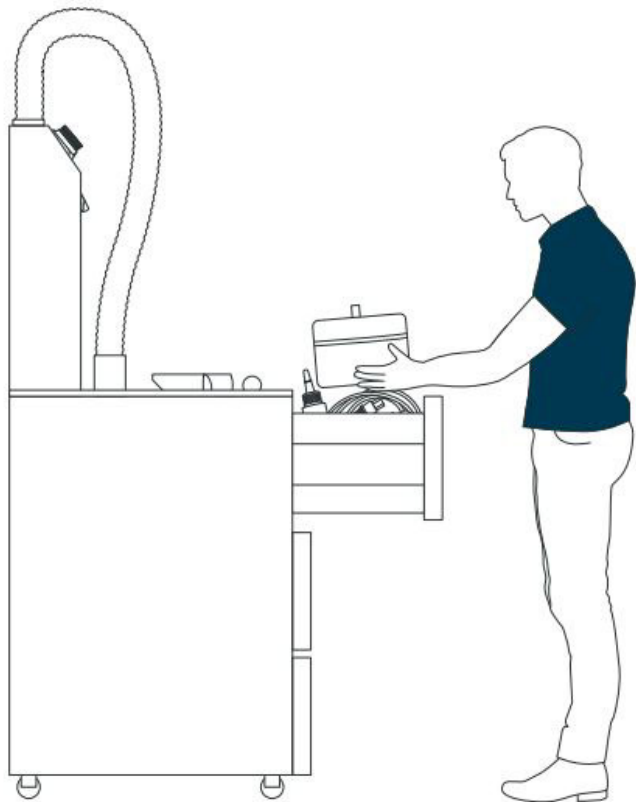

Holes for
dedicated
suction hose
nozzles

3 drawers:
storage space for
depowdering tools

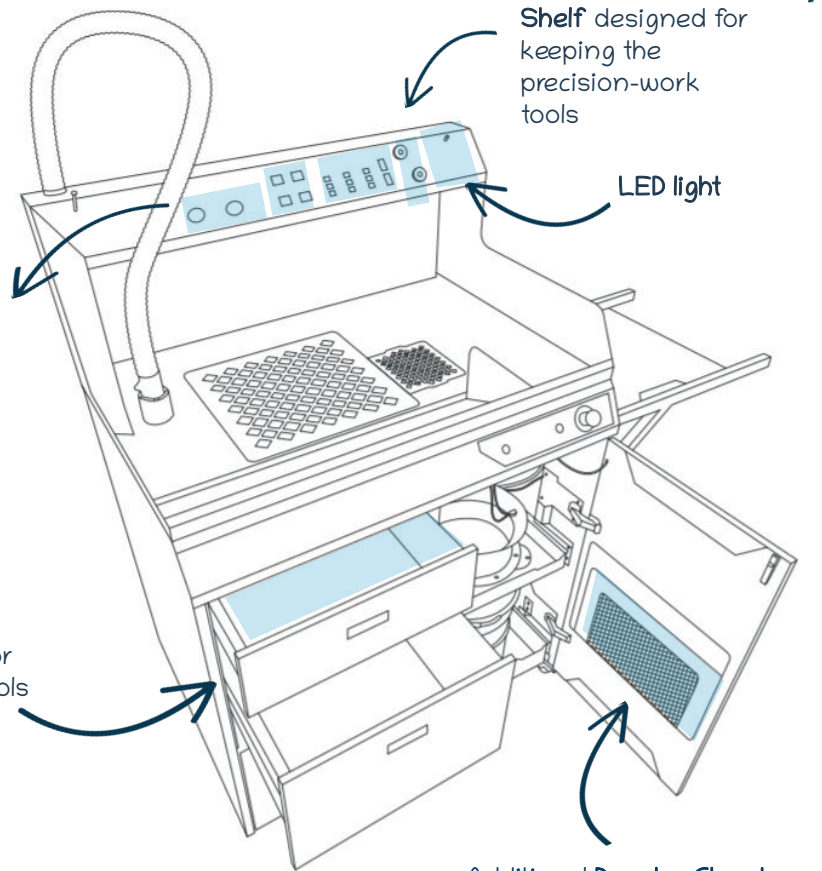

Shelf designed for
keeping the
precision-work
tools

LED light

Additional Powder Chamber
cover for cleaning small parts





Depowdering in 5 simple steps

PHS makes post processing of printouts in 3D SLS technology **faster, ergonomic** and **user friendly experience**



1 Initial post processing

2 Precise depowdering

3 Printouts sandblasting

4 Cleaning the printer & work area


5 Powder refreshing



1 Initial post processing




Thanks to the Chamber cover with large holes located on the worktop, you can easily push the unsintered powder through, while pre-cleaning the print.

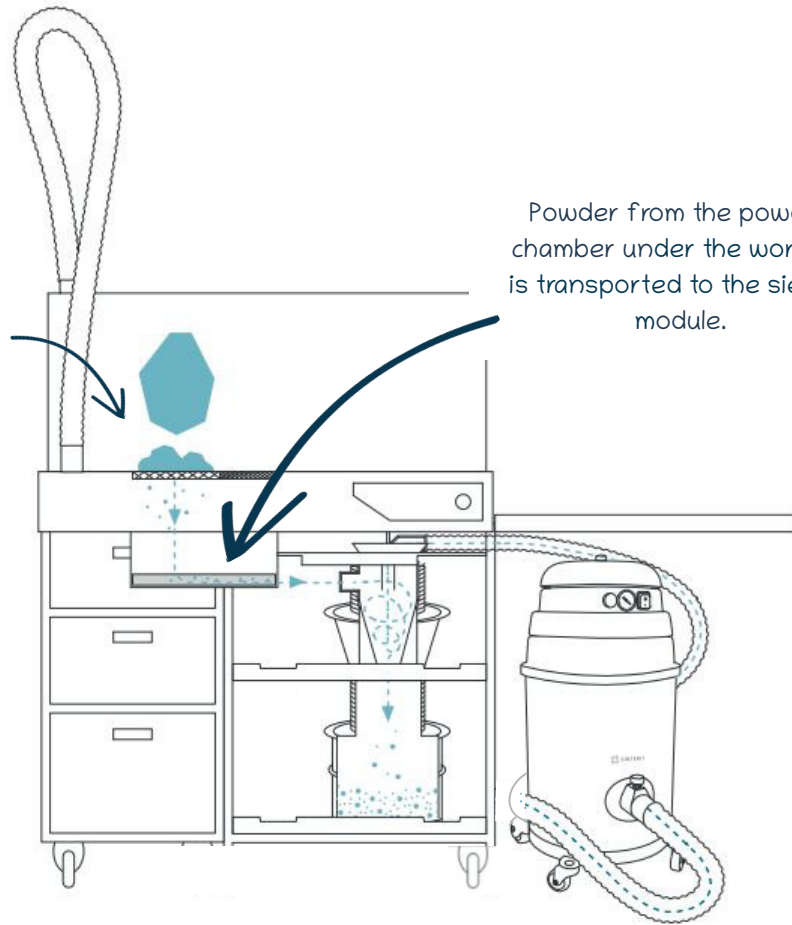

Powder from the powder chamber under the worktop is transported to the sieving module.



2 Precise depowdering

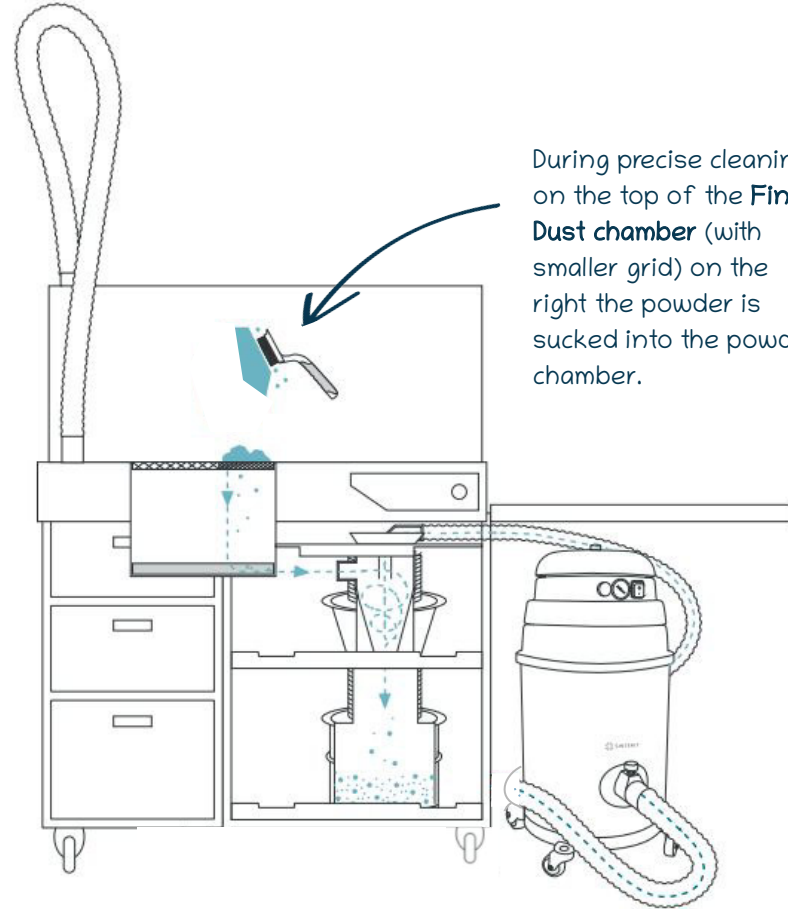


During precise cleaning on the top of the **Fine Dust chamber** (with smaller grid) on the right the powder is sucked into the powder chamber.



3 Printouts sandblasting

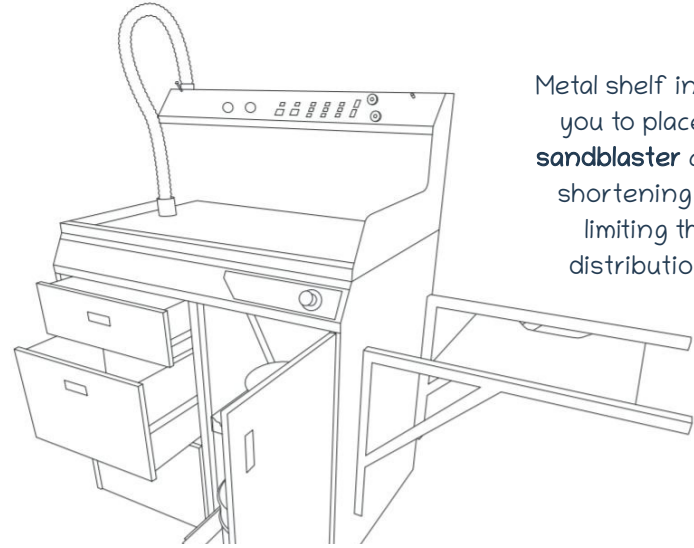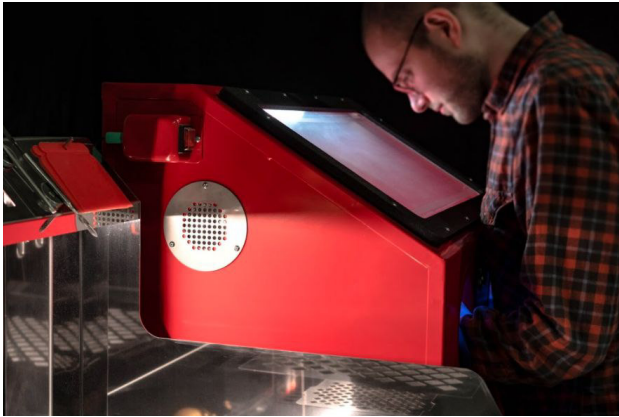

Metal shelf included in the set, allows you to place the **Foldable Tray** or **sandblaster** close to PHS workspace, shortening the working time and limiting the radius of powder distribution outside the station

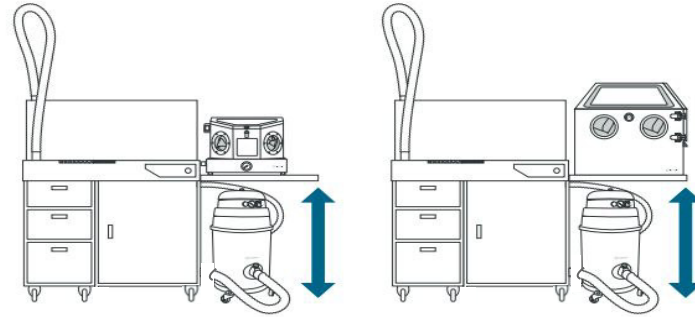


Two mounting heights.
Dedicated for both Sandblaster and Sandblaster XL.



4

Cleaning the printer & work area

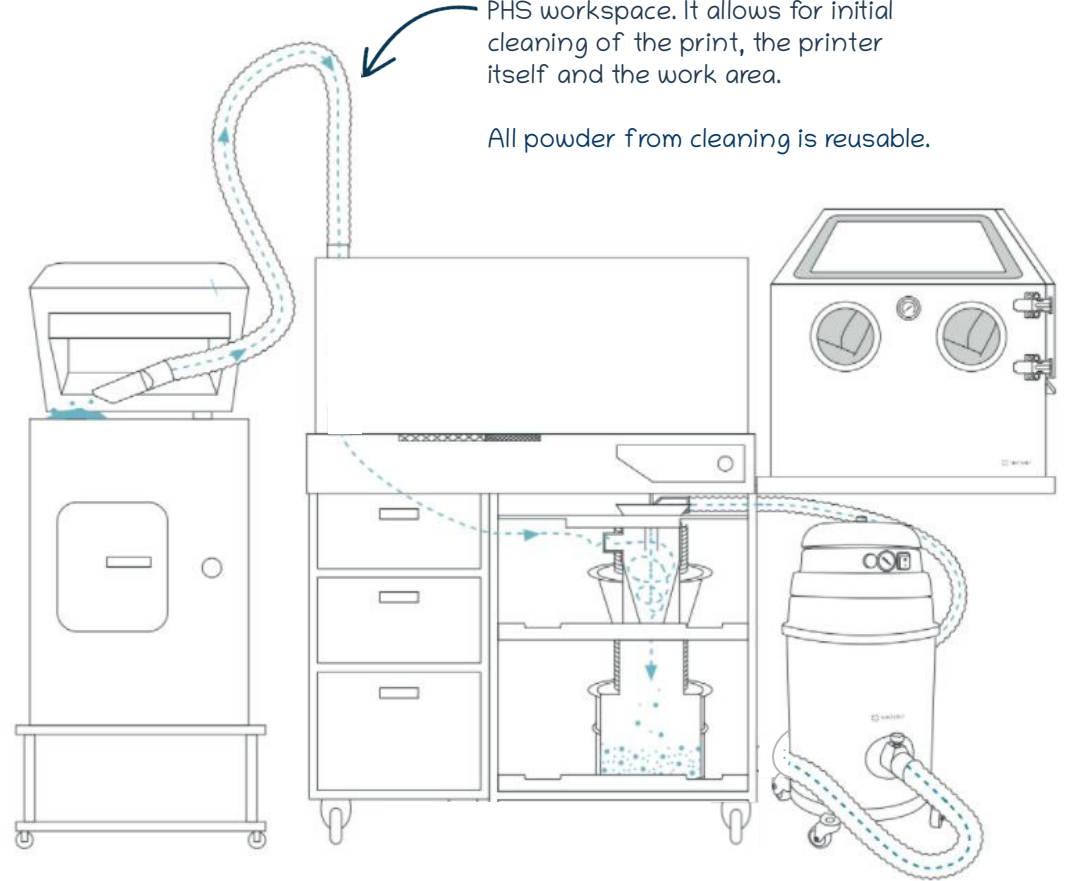

Flexible 2m suction hose reaches easily both the printer and the whole PHS workspace. It allows for initial cleaning of the print, the printer itself and the work area.


All powder from cleaning is reusable.




5 Powder refreshing



All the recovered powder is transferred to a sieving module and then goes into a metal container. Now it's ready to reuse

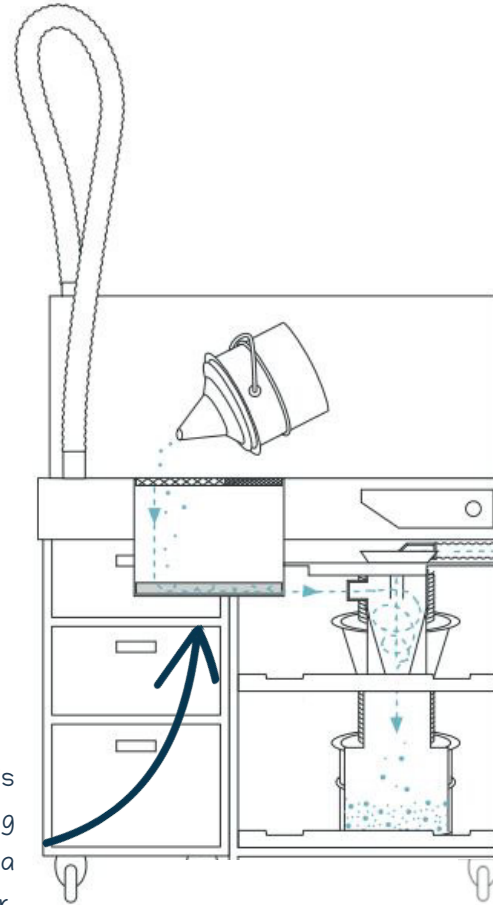



The sieving module located under the worktop sieves all the powder spilled during work and **make it ready for further process** - mixing the used powder with the fresh one

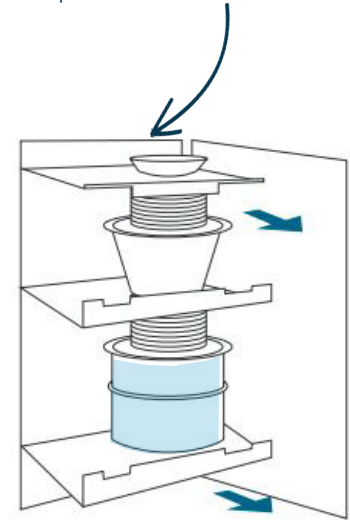



| Super hero - not just for one printer!

Enough to support up to three printers

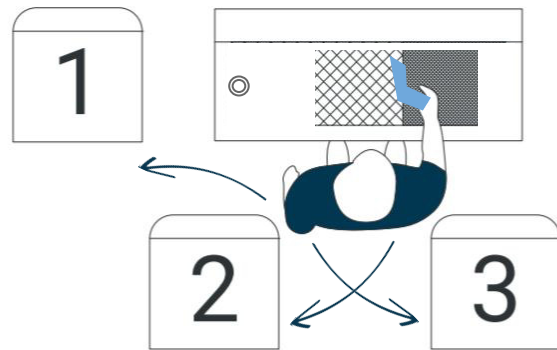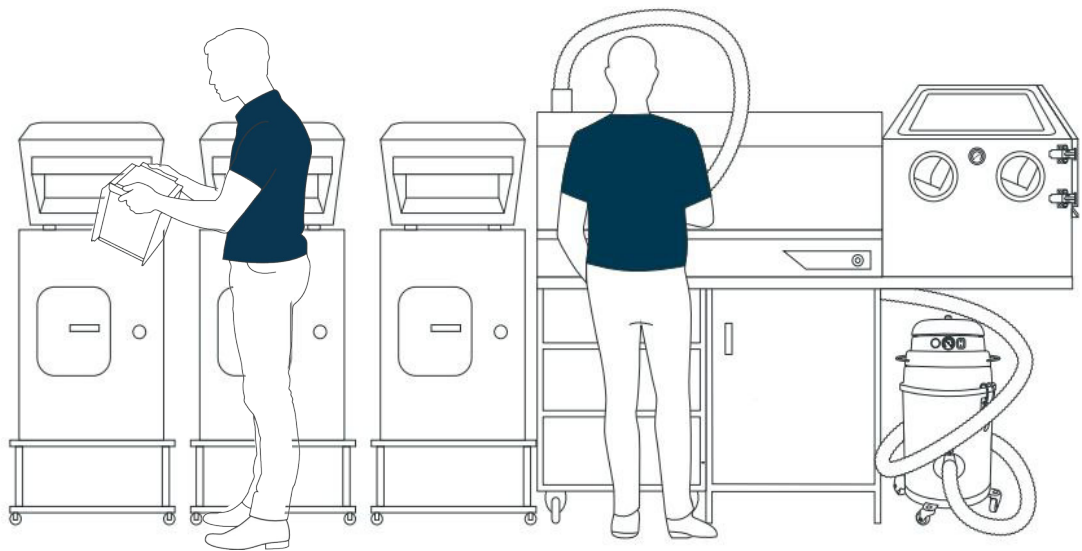



SINTERIT
PHC

SUCTION
VACUUM

SIFTING
ON/OFF

SUCTION

HANDLE

DEPOWDERING
ZONE

POWER


LIGHT
ON/OFF

EMERGENCY
STOP

TURN ON
VACUUM
FIRST



PHS in data

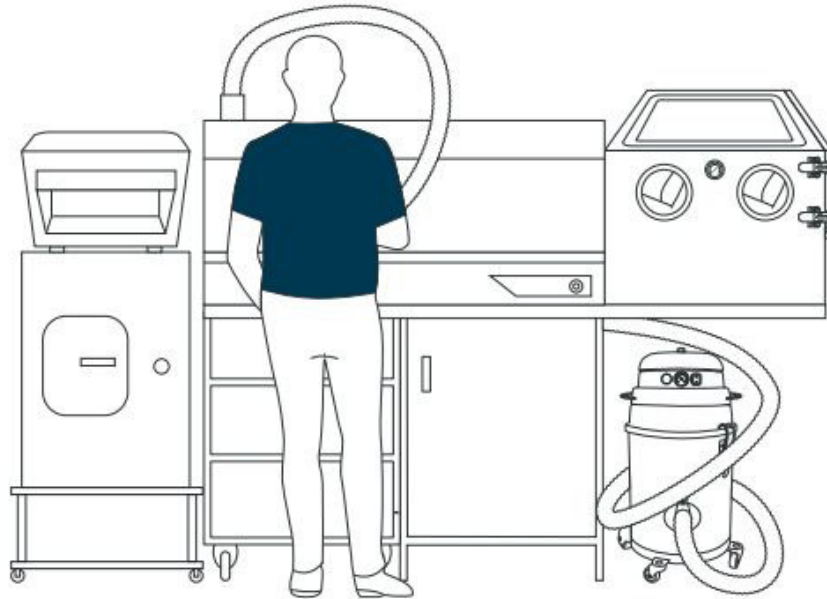

Specification	
Dimension [mm / in] :	700 x 1000 x 1580 / 27.6 x 39.4 x 62.2
Weight [kg / lb]:	150 / 331
Space of installation [mm / in] :	1700 x 2200 x 1800 / 66.9 x 86.6 x 70.9
Labor [min] :	~ 25 for whole process
Set contain:	Sieving module
	Built in powder separator
	3 drawers - storage space
	Shelf for sandblaster
	Hoses, connectors & special 3d printed vacuum inlets
	LED lighting
	Metal container
Powder capacity [l / gal]	max 8 / 1.8
Power supply [V]	110/230 [V] AC, 12 VDC 6,67 A, 80W

Thank You

Do you have any questions?

sales@sinterit.com or your dedicated KAM

+48 570 967 854

www.sinterit.com



Sinterit sp. z o.o.
ul. Nad Drwiną 10 bud. B3
30-741 Krakow
Poland
www.sinterit.com

